

Required extra settings within Philips Hue Hub

Renaming your Philips Hue Hub

1. Go to "Settings"
2. Click "Hue Bridges"
3. Click the "i" and rename your Philips Hue Hub to the location or an easy to recognise name such as "Mobbs home"

Setting up "Out of home control" for your Philips Hue Hub

1. Go to "Settings"
2. Make sure your Hue Bridges is showing a green "Connected" and click on "Out of home control"
3. Click "Log in"

Create an account

1. Verify your email address by going to your emails, opening the email from Philips Hue and clicking "Verify my account"
2. Click on "I have verified my email"
3. Input your details and click "Continue"
4. Push the button on the Philips Hue Hub you want to connect to
5. Click "Continue"
6. Click "Yes"

Setting up automatic software updates for your Philips Hue Hub

1. Click "Settings"
2. Check for any updates by clicking "Software update" under Settings
3. If updates are available, install them immediately. If no updates are available, setup automatic updates by clicking "Automatic update"
4. Select a suitable time (such as 2am when the Hue Hub will not be required)
5. Once complete, click "Close"

Setting up the home location for your Philips Hue Hub

1. Click "Settings"
2. Click "Advanced"
3. Click "Home location"
4. Click "Got it" (a pop-up asks to allow Hue to access your location ALWAYS)
5. Click "Save" when you have found the right location (it will not allow adjustment of your location as it is based on your devices location)